



425 Hanley Industrial Court, St. Louis, MO 63144
 Phone: (314) 644-4300, Fax: (314) 644-5332
 www.indeeco.com

INSTALLATION INSTRUCTIONS For INDEECO of the Toe-Space Heater «TSI Series»

THE INSTALLATION MUST BE EXECUTED
 BY A QUALIFIED TECHNICIAN



MOUNTED UNDER CABINET

- 1- Avoid directing warm air towards working area.
- 2- Provide an opening of 10-1/2 in. (267 mm) deep (minimum). The heater fits in a space 4 in. (100 mm) high.
- 3- Bring in power supply to the left or rear of opening.
- 4- Remove connection box lid and appropriate knockout.
- 5- Connect heater leads with supply leads according to local and national code. Refer to wiring diagram.
- 6- Replace lid and slide heater in opening. Secure heater in place with the provided screws.
- 7- Test heater by temporarily adjusting thermostat at maximum temperature.
- 8- To reach the manual cutout or to install built-in thermostat, remove the two screws that hold the grill.

**NOTE : DO NOT INSTALL THE HEATER
 ON OR ABOVE A LINOLEUM FLOOR.**

MOUNTED ON CABINET

- 1- Provide an opening of 10-1/2 in. (267 mm) deep (minimum) and a minimum spacing of 4 in. (100 mm) from ceiling.
- 2- Add support under heater if required.
- 3- Follow steps 3 to 6 of MOUNTED UNDER CABINET.
- 4- Assemble facing to grill.
- 5- Follow steps 7 and 8 of MOUNTED UNDER CABINET.

IMPORTANT

Do not obstruct front of heater for at least 48 in. (1200 mm).

ATTENTION

- Basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.
- Read all instructions before using this heater.
 - This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 24 in. (610 mm) from the front of the heater.
 - Do not use outdoors.
 - Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
 - To prevent a possible fire, do not block air intakes or exhaust in any manner.
 - Heater contains arcing and sparking parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
 - Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

AMERICAN VERSION ONLY: This heater includes a visual alarm to warn that parts of the heater are getting excessively hot. If the light turns on, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WHEN THE ALARM LIGHT IS ON.**

MAINTENANCE

Once a year, remove the grill and use a vacuum cleaner to remove the dust accumulation inside the heater. Cleaning should be done while the heater is disconnected from the supply circuit.

A qualified technician should perform any other servicing.

**KEEP THIS INSTRUCTION PAMPHLET
 FOR THE USER INS169-200301-05**

