



Phone: (314) 644-4300, Fax: (314) 644-5332  
www.indeeco.com

## INSTALLATION INSTRUCTIONS For the optional built-in thermostat of the “WRI Series”

THE INSTALLATION MUST BE EXECUTED  
BY A QUALIFIED TECHNICIAN



RISK OF ELECTROCUTION

### INSTALLATION:

- 1- Remove front cover and junction box cover.
- 2- **Single-pole thermostat:**  
Screw the thermostat on the junction box cover.  
**Double-pole thermostat:**  
Insert the cardboard insulator supplied in the kit between the thermostat and the junction box cover and screw (Detail A).
- 3- Connect the thermostat to the unit according to the wiring diagram (Fig. 1) and the drawing (Fig. 2a or 2b).
- 4- Make the electric connections of the unit according to local and national codes in force.  
Refere to the wiring diagram (Fig. 1).
- 5- **Single-pole thermostat:**  
Replace and screw the junction box cover.  
**Double-pole thermostat:**  
Fold and insert the cardboard insulator between the thermostat and the side of the recess box and screw the junction box cover in place.
- 6- Replace and screw the front cover of the heater before testing the heater.

### BUILT-IN THERMOSTAT SETTING :

The setting of the built-in thermostat can be done with the supplied knob or through the hole in the front cover with a small slotted screwdriver if you have a tamperproof thermostat.

### To set the thermostat at the desired temperature:

- Set thermostat at maximum temperature (turn clockwise).
- When the desired temperature is reached, turn the thermostat counter-clockwise slowly until you hear a “click”.
- The thermostat will keep this room temperature.

KEEP THIS INSTRUCTION PAMPHLET  
FOR THE USER INS127-200510-02

Fig. 1 

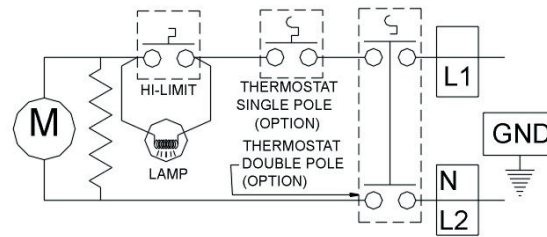


Fig. 2a : Drawing single-pole thermostat

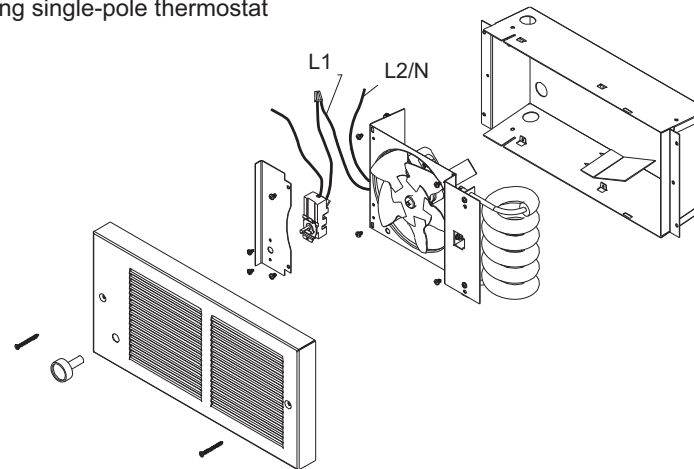


Fig. 2b : Drawing double-pole thermostat

