




# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR INDEECO THERMOSTAT KIT FOR COMMERCIAL UNIT HEATER “UCI SERIES”

## **CAUTION**

**Disconnect all power supplies  
before working on any circuit.**

1. Remove access cover to control box of heater.
2. Remove screen on fan side.
3. Put the thermostat in the control box and pass the capillary tube bulb through the bushing.
4. Install thermostat with the existing holes at the back of the unit using the provided screws. Put the knob on the stem.
5. Secure the bulb on the backside of the control box using the two nylon straps and two screws.
6. Connect the two provided wires from the thermostat to the control terminal blocks T1 and T2.
7. Replace screen and access cover and reconnect power supply.
8. Check thermostat by temporarily setting thermostat to maximum temperature, then to minimum. Adjust thermostat to the desired set point.

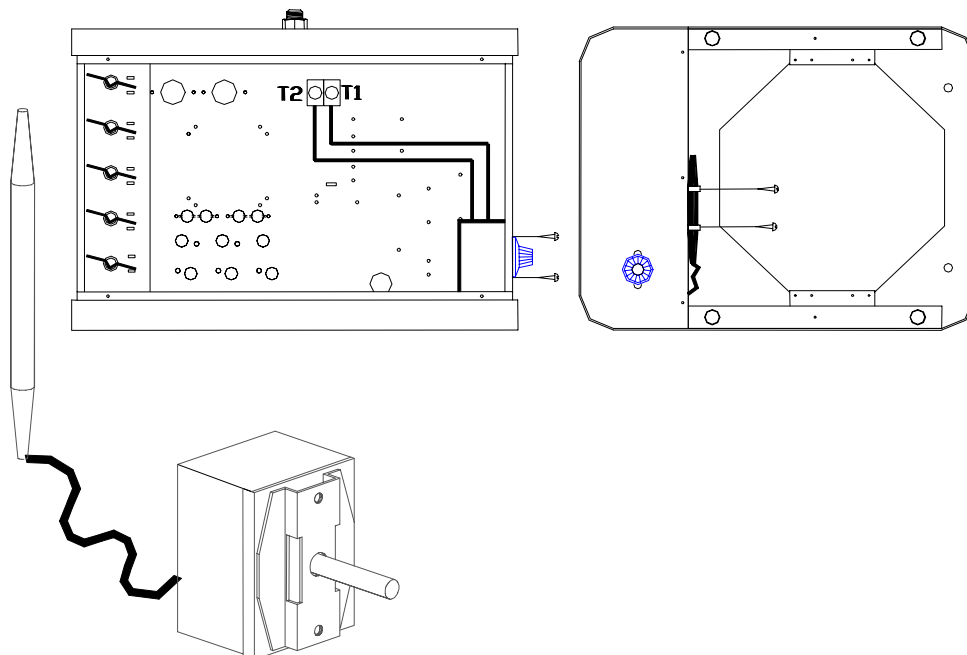

INDEECO  
425 Hanley Industrial Court  
St. Louis, MO 63144  
Phone: (314) 644-4300 Fax: (314) 644-5332  
[www.indeeco.com](http://www.indeeco.com)