SmartRooms

Thermal Comfort System

By Therma•Ray

Distributed By INDEECO

ARCHITECTURAL SERIES SYSTEM

Installation Guide

MECHANICAL INSTALLATION

Before beginning installation, check heating panel(s) for damage. Do not install damaged panels. Therma-Ray commercial heaters Series AS may be installed in suspended "T-Bar" ceiling systems or surface or recess mounted using optional mounting frames. For surface or recess mounting, refer to mechanical installation instructions provided with mounting frame kits. Minimum recommended installed height from floor is 8 eight feet (2.4 meters). Once the support channeling is erected, the heaters may be laid in desired locations.

clips to carry the weight of the heating panel.

SUPPORT CLIPS THER MA-RAY HIGH DENSITY HEATING PANEL — 4"X4"X1 1/2" JUNCTION BOX WITH COVER

Whether you're a contractor, architect, builder or

homeowner, creating the perfect indoor environment has

always been a challenge. Therma-Ray, the world's #1 name in thermal comfort systems introduces you to the ultimate solution, **Smart**Rooms. Please take the time


to read this installation guide carefully before you begin.

Suspended Heaters: Each heater comes equipped with

four suspension clips. A wire or chain is connected to the

Remember, accurate measurements are the key to

success for a proper installation!

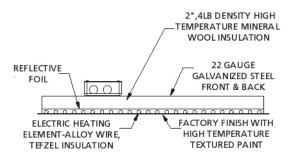


CUTAWAY VIEW OF SMARTROOMS ARCHITECTURAL SERIES HEATER

BRANCH CIRCUIT CONNECTION

Therma-Ray Architectural Series heaters are to be connected in parallel to the branch circuit. Canadian installations shall be made according to the provisions of Section 62 of the Canadian Electrical Code, Part 1, and to regulations of all authorities having jurisdiction. U.S. installations are to be made in accordance with the National Electrical Code and local codes where applicable. When determining the number of branch circuits required to accommodate the heating load, note the branch circuit must be derated in accordance with Canadian Electrical Code or National Electrical Code as applicable. For proper heater performance, ensure the supply voltage matches the voltage printed on the heater nameplate. DO NOT connect the heater to a higher voltage. Connection to lower voltages is permitted but will cause the heater to operate at a reduced wattage. Ensure the electrical supply is de-energized before connection in an approved box using approved wire nuts. Do not lay outlet on heated panel. Replace outlet box cover before energizing.

The difference between heat and comfort.

Plaster Frame Kit Option

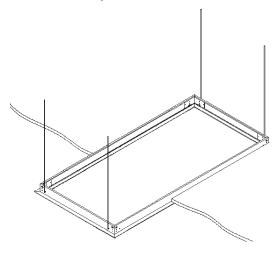



INDEECO 425 Hanely Industrial Court St. Louis, MO 63144

Phone: 314-644-4300 Fax: 314-644-5332

E-mail: sales@indeeco.com

FINAL INSTALLATION

Remaining grid spaces may be filled with acoustic decorator tiles as desired.

Ensure there is access to supply connectors through adjacent non-heating panels.

CATALOGUE#	VOLTAGE	WATTS	WIDTH(IN)	LENGTH(IN)	WEIGHT (LBS)
AS2424-375-208	208	375	24	24	15
AS2424-575-208 AS2448-525-208	208	525	24	48	30
AS2448-675-208	208	675	24	48	30
AS1448-300-240	240	300	14	48	18
AS1448-435-240	240	435	14	48	18
AS1460-375-240	240	375	14	60	22
AS1460-550-240	240	550	14	60	22
AS2424-250-240	240	250	24	24	15
AS2424-375-240	240	375	24	24	15
AS2448-500-240	240	500	24	48	30
AS2448-750-240	240	750	24	48	30
AS1460-550-347	347	550	14	48	22
AS2448-500-347	347	500	24	48	30
AS2448-700-347	347	700	24	48	30
AS2448-725-347	347	725	24	48	30
AS2448-750-347	347	750	24	48	30
SURFACE MOUNT	ING FRAMES				
SF1448			14	48	8
SF1460			14	60	10
SF22			24	24	4
SF24			24	48	9
PLASTER MOUNTI	NG FRAMES				
PF1448			14	48	5
PF1460			14	60	6
PF22			24	24	2
PF24			24	48	4

ACCESSORIES

SR-LV SmartRooms Comfort Controller low voltage complete with sensors

NOTE: Heaters are available in 120, 208, 240, 277 and 347 volts. When ordering, add desired voltage as a suffix number (example: AS2448-500-240). Other size panels are available upon request.

